

## Installation Instructions

### Step 1

Check that the shower pan is level across the back and at corners.

### Step 2

Place left corner (A) on left side with 2" (shorter side) going towards the front resting on shower pan. Starting at the bottom, screw into place with included screws.



### Step 3

Repeat for the right corner (B) Making sure shorter side is facing out. Again, checking to make sure corners are level.




### Step 4

Check the backwall by setting it in place. Sanding or trimming may be required depending on squareness of holes.



### Step 5

Place double-sided tape across the top and bottom of the back wall (C). Place three strips of double-sided tape down the center, then one at the top and one at the bottom as shown in picture. Squeeze daubs of silicone adhesive on backwall, as shown in the picture in blue.

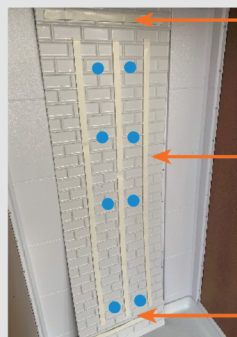

Place double-sided tape across top

Place three strips of double-sided tape down the center

Place double-sided tape across the bottom

### Step 6

Set backwall on pan and press into place from top to bottom applying pressure to tape and silicone.

### Step 7

Test left side wall (D) by putting it in place. Sand or trim if necessary. Put double-sided tape and daubs of silicone adhesive on left side wall. (Same pattern as Step 5).

### Step 8

Set wall on shower pan and press into place from top to bottom.

### Step 9

Repeat the process for the right-side wall (E).

### Step 10

Apply caulking to seams between wall pieces, between wall surround, shower pan, and around perimeter of surround for watertight seal. (Recommended caulking/sealant DAP Kwik Seal).



Caulk all seams