




DUO TP Holder Installation Instructions

- Part #: 33200

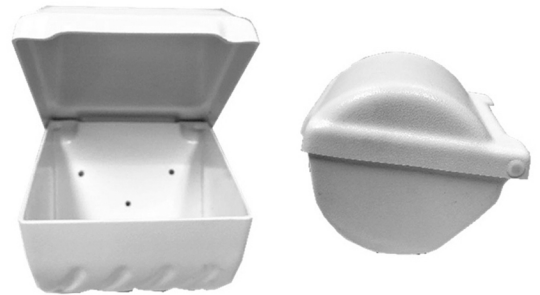

The tools required for this installation:

- Duo TP Holder Installation Kit (Included)
 - 3 low-profile pan head (#8 Screws)
 - DRILL BIT- 1/8"
- Not Included:
 - Drill: We recommend 1/8" Bit

Step 1: Find the stud, and screw all 3 low-profile pan head screws into the stud.

Step 2: Place TP inside compartment and enjoy!

For questions or installation problems, please contact DUO FORM Customer Service at 269-663-8525.

Electronic copies of all instruction sheets can be found at www.duoformplastics.com. These instructions supersede all prior instruction sheets. Failure to follow instructions may result in voided warranty. DUO Form Plastics reserves the right to make changes and to discontinue products without notice or obligation.

DUO TP HOLDER Installation Instructions: Initial Release 12.01.2020 Part #TPHOLD-KIT